

**NEWTON COMMERCIAL  
FITTING MINI SPEEDO PANELS  
ROUND AND OVAL TYPES**


Remove the door draft excluder away from the body where the end of the panel wraps around the door opening.

Fit dash tray liner initially.

On the dash panel boards you will notice the small end has a crease in the reverse side.

Lay the panel on it's back and bend the crease 90 degrees forwards. If you have a crease along the top edge, this should bent similarly. Position the lower part of the panel on top of the dash tray liner and then bend the panel along its length towards you and insert the top edge under the dash top.

Apply pressure along the centre of the panel to flatten it into place. The outer flap near the crease should then be wrapped around the edge of the door opening (can be glued into position) and the draft excluder replaced.

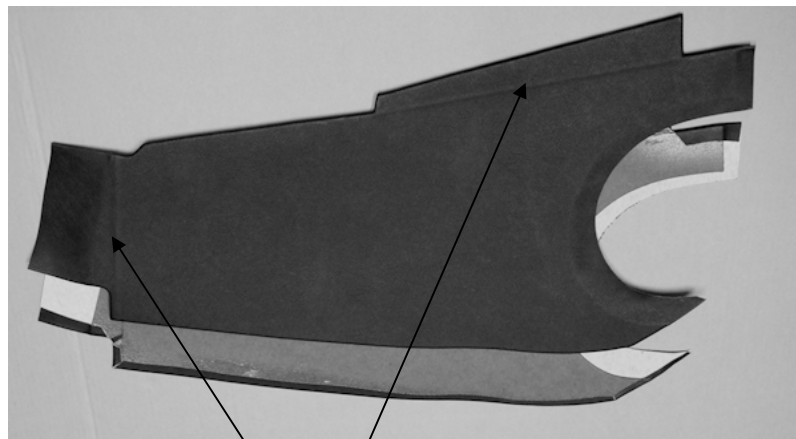

Creases in board